

## **Remove the Third Brake Light Cover**

*CougarDB.com*

1. Open the trunk hatch, and physically get inside.
2. Look up at the bottom of the hatch and locate the plastic welds holding in the "fabric" cover.
3. Pop open the plastic welds; avoid doing this on a very cold day as cold temperature tend to make the plastic very brittle and you might end up breaking a few.
4. With all plastic welds popped open, the "fabric" piece should come off. Look for the housing in the middle where the third brake light is. That housing should pop off easily if you look at how it's held on.
5. Next, get out of the trunk and stand facing the rear of the vehicle. Pull trunk down a little (but not closing).
6. Use one hand to hold the trunk hatch half-open, and reach around with the other behind the third brake light cover.
7. On the inside of the light cover, near the top-center, is a very small tab. Carefully push it down while push the whole cover toward you. It should pop out after a few tries..